




CANOPY INSTALLATION INSTRUCTIONS

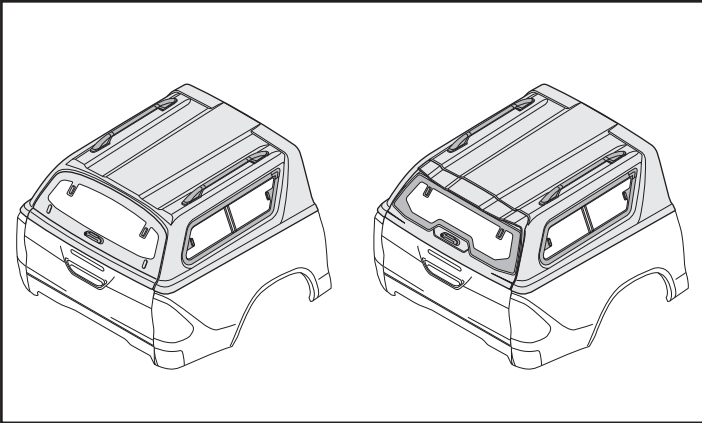


Caution for installation

Read this mounting manual carefully, before your start the installation.

1. Area where to install product should be clean.
2. During installation, person who installed should take off any ornaments.


Product name : CANOPY III FBL
 Model name : TOYOTA REVO DBC 2015
 Inst. number : L04-0286

Component parts

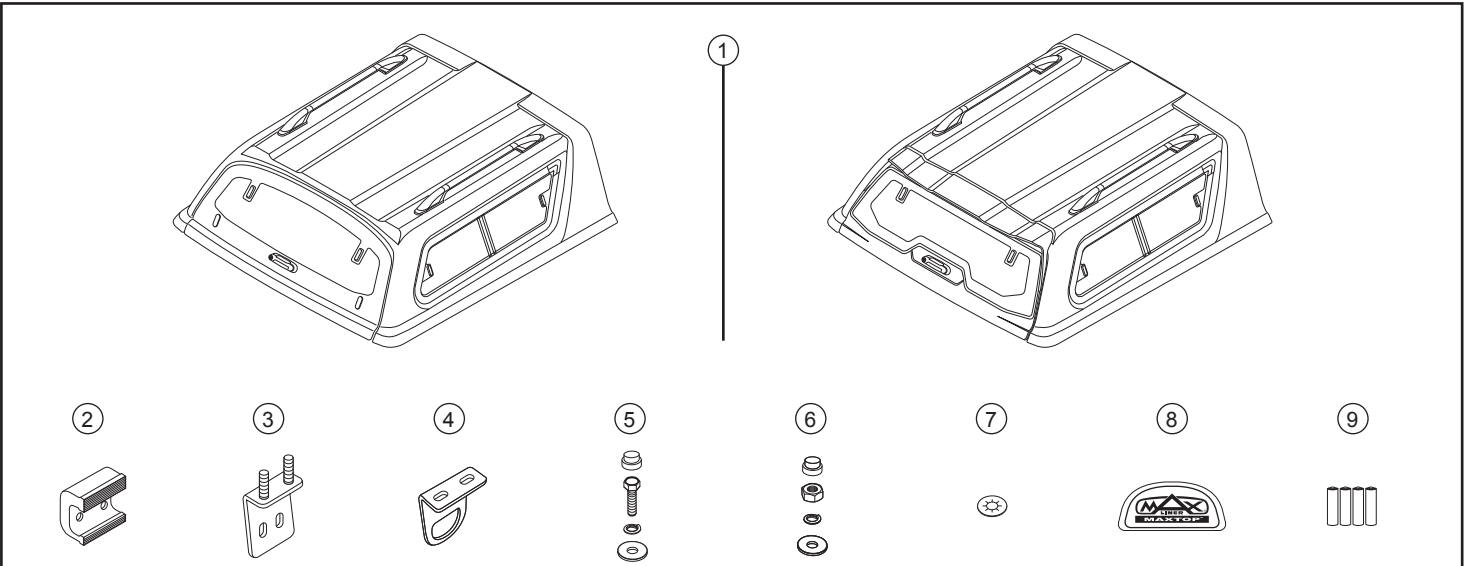





No.	Part name	Q'ty
1.	Canopy shell set	1 Set
2.	Clamp lock FB	4 Pcs.
3.	Plate rail lock FB	4 Pcs.
4.	Plate rail lock FL	4 Pcs.
5.	Bolt set M8x40	8 Pcs.
6.	Fastener M8 set	8 Sets
7.	Plastic washer	8 Pcs.
8.	Emblem	2 Pcs.
9.	Battery AAA	4 Pcs.

Tools used

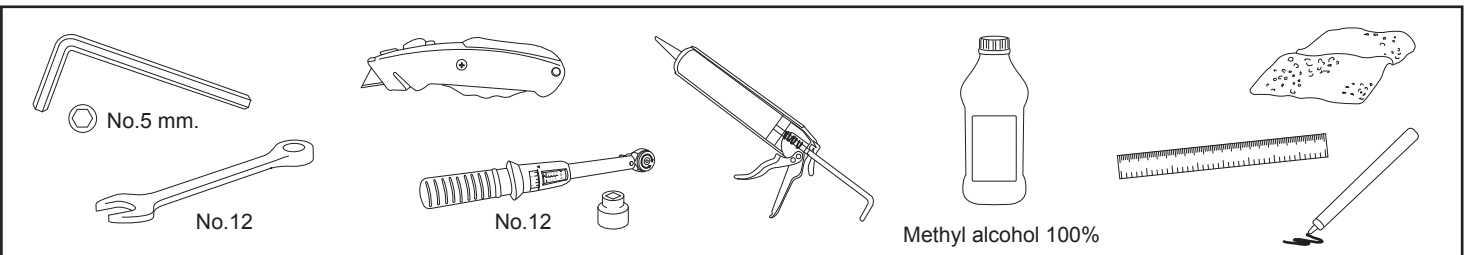


Instruction procedure (without bed liner)

1

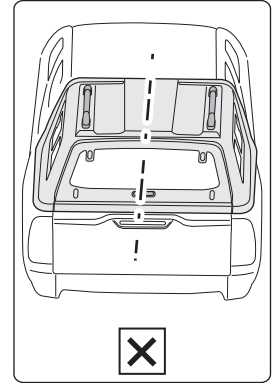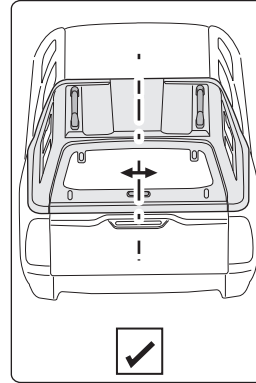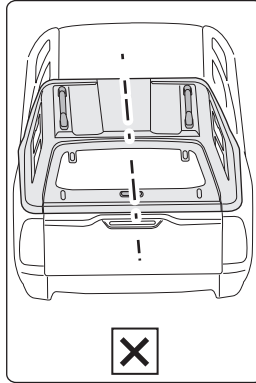
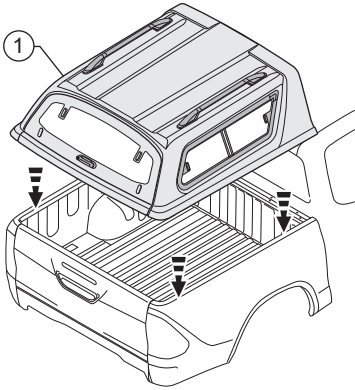


2 RH/LH is symmetry.




2.1

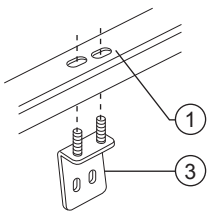



2.2

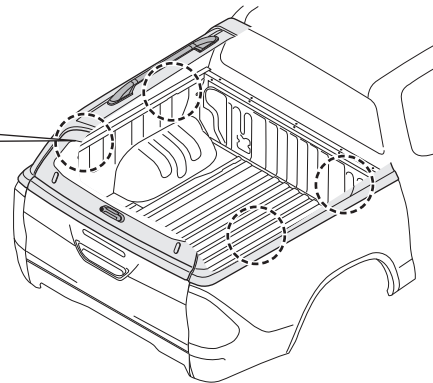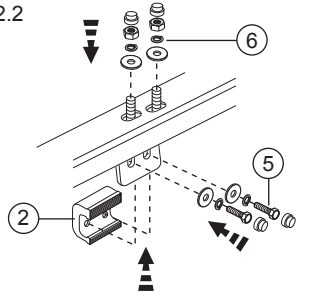



3 RH/LH is symmetry.

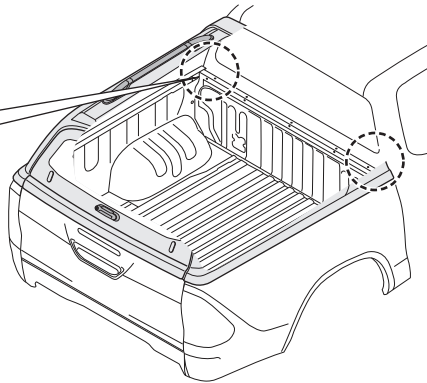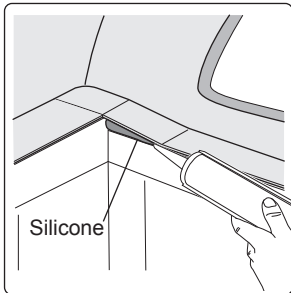

4

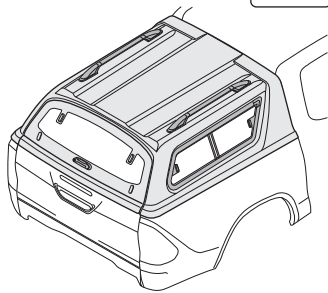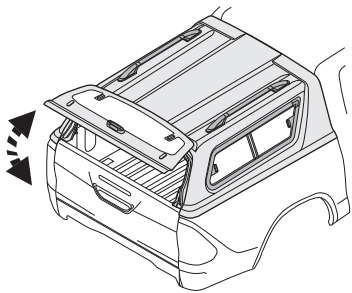

5 RH/LH is symmetry.

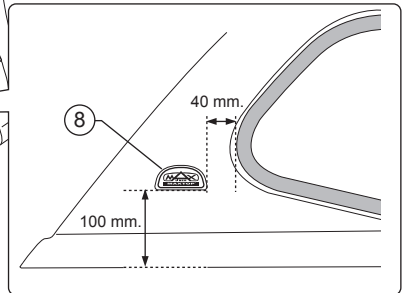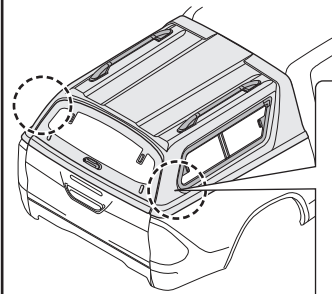


Vandapac Co., Ltd.







700/135 Moo 5, Klongtumru, Muang Chonburi, Chonburi, 20000 Thailand Tel : (038)468-008 Fax : (038)468-006 Email : mail@vandapac.com

Instruction procedure (with bed liner)



1 RH/LH is symmetry.

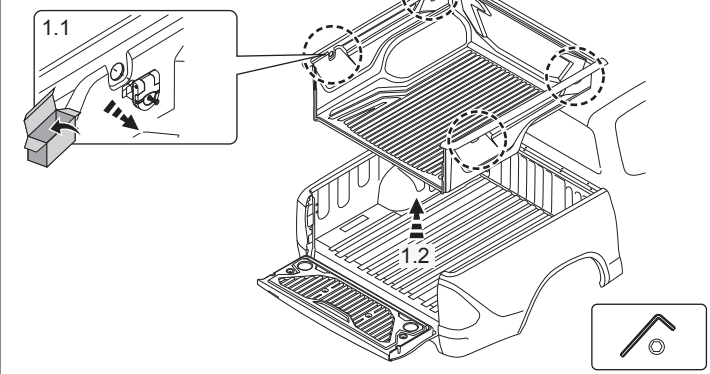



2 RH/LH is symmetry.

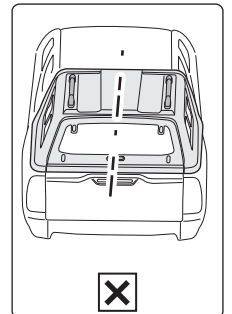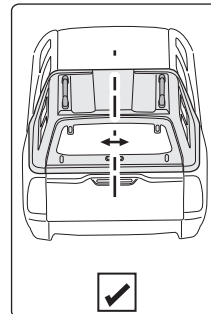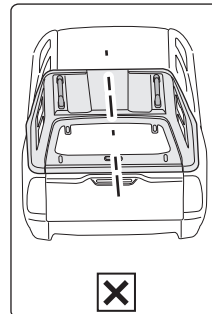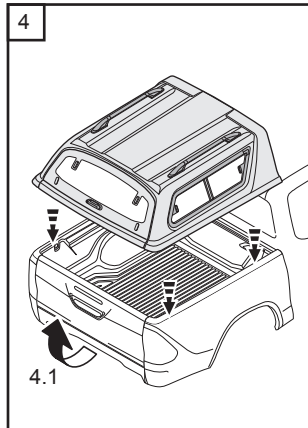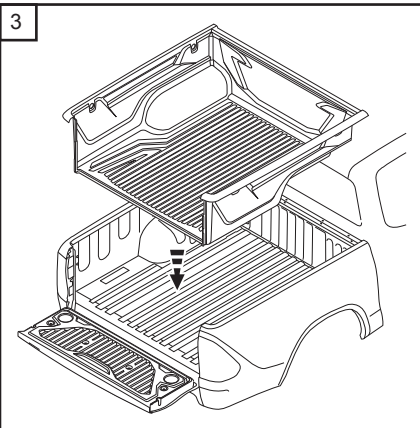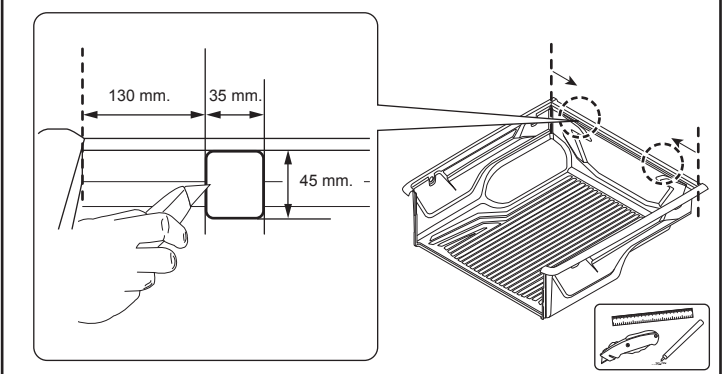

5 RH/LH is symmetry.

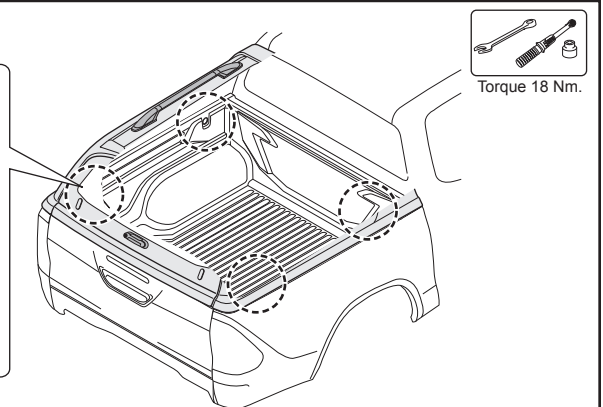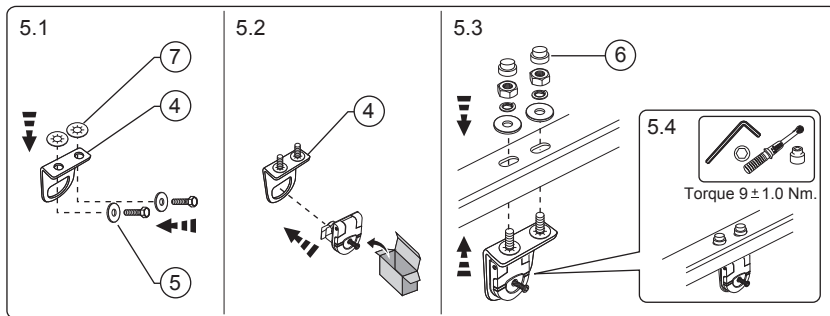


6 RH/LH is symmetry.

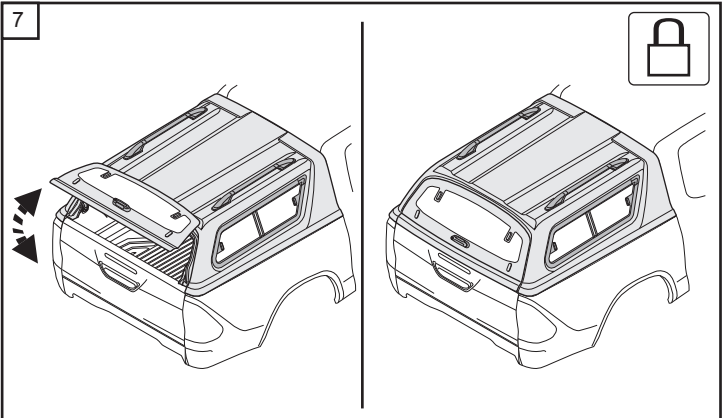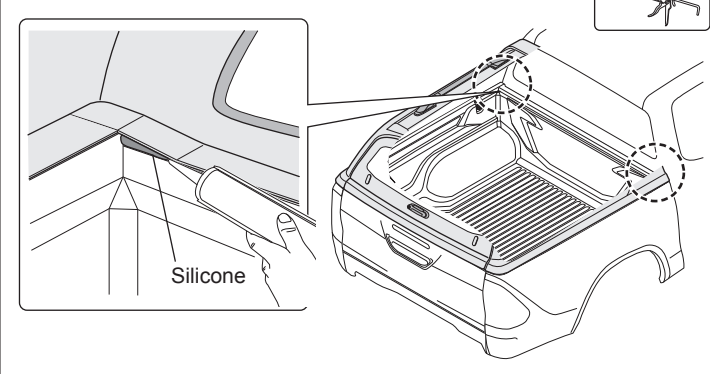

Instruction procedure (with bed liner)

8 RH/LH is symmetry.

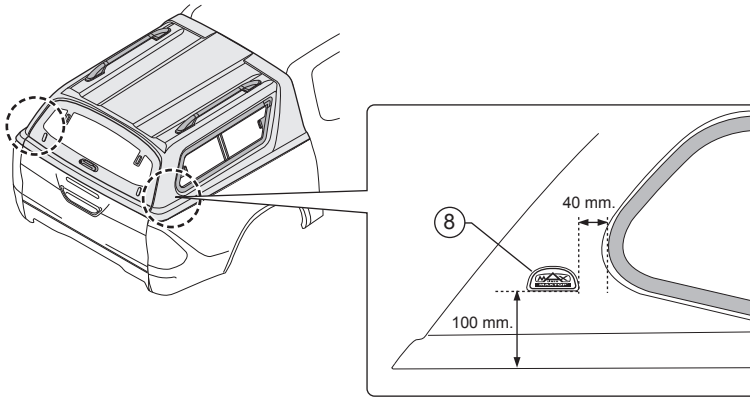

NOTE : ROOM LAMP

